


Instructions for pairing transmitter to receiver

Transmitter

Start the transmitter

1. Start the transmitter by pressing any button.

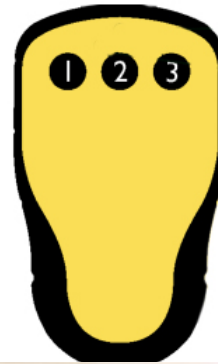


Register the transmitter to the receiver

1. Press the “Function”-button on the receiver.
(the upper button “F”).
Function LED shines red (LED 7).
2. Press the “Select”-button on the receiver.
(the lower button “S”).
Alla relä-LED tänds röda.
3. Press and hold buttons 1 and 2 on the transmitter.
All relay LED’s light up.
Keep the buttons pressed.
4. The relay LED’s blink 3 times.
Release the buttons.
The pairing is done.



Erase all transmitter from the receiver

1. Press the “Function”-button on the receiver.
(the upper button “F”).
The function LED shines red.
2. Keep the “Select”-button pressed on the receiver.
(the lower button “S”).
All relay LED’s light up.
3. All relay LED’s turn off.
Release the “Select”-button.
All transmitters are now erased from the memory.

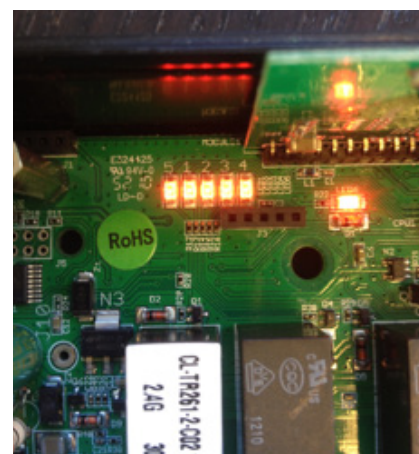

NOTE! If the “Function” LED on the receiver blinks red, one or more transmitters are paired to the receiver.