

**Issue: Trouble getting lubrication oil from lubrication oil pump, although recommended installation procedures are followed.**

**Solution:**

The filter for keeping debris from reaching the lubrication pump may be obstructing the oil from reaching the pump. This may be to use of too thick lubrication oil or changed temperature conditions.

- Unscrew the pump from the tank (tilt unit on G2 models).
- Detach the filter from the pump.
- Have a small screwdriver at hand also cutting pliers may be useful.
- Remove the metal mesh.
- Reinstall in reverse order, **use thread glue for screws holding the pump.**

This procedure will make the pump a little more receptive to debris but will still leave some filtering capabilities. This is to be done only if conditions so demand.

